

ASSEMBLING INSTRUCTION

CLASSIC WINDSHIELD

DR8300-26

WWW.BARRACUDAMOTO.COM


LEGEND

- | | | |
|--|--|--|
| 1. SPECIFIC BRACKET
STAFFA SPECIFICA
SOPORTE ESPECÍFICO
SPEZIFISCHE KLAMMER
SUPPORT SPÉCIFIQUE | 3. TEFLON WASHERS Ø5
RONDELLA TEFLON Ø5
ARANDELAS DE TEFLON Ø5
TEFLONSCHIBE Ø5
RONDELLE EN TEFLON Ø5 | 5. RUBBER WASHERS
RONDELLA GOMMA
ARANDELAS DE CAUCHO
GUMMISCHEIBE
RONDELLE EN CAOUTCHOUC |
| 2. TB SCREW M5X12
VITE TB M5X12
TORNILLO TB M5X12
TB SCHRAUBE M5X12
VIS TB M5X12 | 4. CLASSIC SCREEN
CUPOLINO CLASSIC
CUPULA CLASSIC
WINDSCHUTZ KLASSISCH
SAUTE VENT CLASSIQUE | 6. THREADED THICKNESS
SPESSORE FILETTATO
ESPESOR DE ROSCA
GEWINDEDICKE
ÉPAISSEUR FILETÉE |

REPEAT THE FOLLOWING ASSEMBLY STEPS
FOR BOTH SIDES OF THE MOTORBIKE

ORIGINAL M6X18 FLAT-HEAD SCREW

ORIGINAL INDICATORS

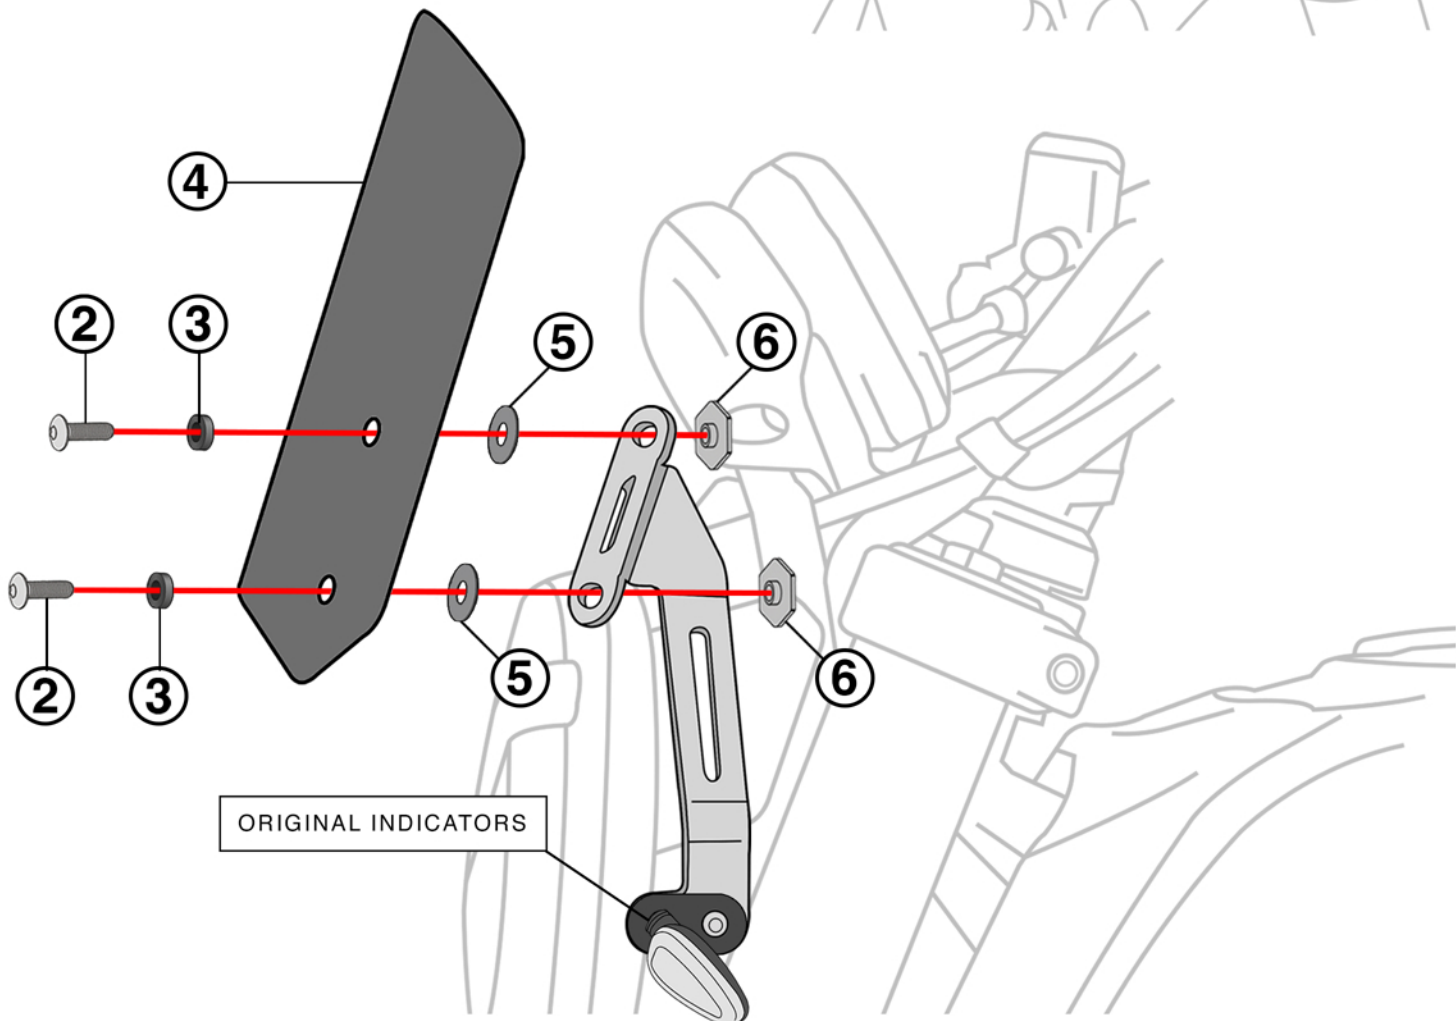

ORIGINAL INDICATORS